

# SCOREBOARD OPERATOR QUICK GUIDE - If No Timer Is Used

## SETUP

- Plug the controller into the outlet under the press box bench. Activate the unit using the switch in lower left corner on the back of the unit.
- Raise antennae on right side of the controller.
- To clear the scoreboard of the previous game:
  - Put the **TIME IN** switch in the **DOWN** position.
  - Depress the **SHIFT** button and the **NEW GAME** button simultaneously.
  - Small screen on the controller will ask, "New Game?" Depress the **YES** button
- Leave the **TIME IN** switch in the **DOWN** position.

## Setting the Clock

- Depress the **SHIFT** and **T.O.D.** button simultaneously.
- The small screen on the controller will display the field to enter the time.
- Enter the Hour and Minutes in this format 04:15 for 4:15 p.m. Don't input the seconds.
- After entering the current time, depress the **ENTER** key.
- Leave the **TIME IN** switch in the **DOWN** position.

## Starting the Game

- Depress the **INNING** button - Depress 1 for the start of the game using the white numeric keypad, then depress **ENTER**.
- Use the **BALL**, **STRIKE** and **OUT** buttons as the umpire calls the game.
- When the batter completes their turn at the plate, depress the **CLEAR BALL STRIKE AT BAT** button to clear the ball/strike counter.

## Recording Runs

- Depress the **VISITOR SCORE BY INN** button, then depress the +1 button - A zero will register on the scoreboard in the appropriate inning.
- Depress the +1 button each time a run is scored - If more than 1 run is scored, you can depress the +2 or +3 buttons as appropriate to advance the scoreboard.
- If a run is accidentally depressed, use the -1 to erase that run - Continue to depress the -1 until the appropriate score is reached.
- When the home team comes to bat, depress the **HOME SCORE BY INN** button - The score will be blank so depressing the +1 button will register a zero on the scoreboard for the appropriate inning.
- When the two halves of the inning are completed, depress the **INNING** button and enter the next inning number using the white numeric keypad, then depress the **ENTER** button - This will advance the scoreboard to the next inning.

## Ending the Game

- Turn off the controller - Unplug from outlet.
- Move the controller aside and lower window shutters.
- Lock press box.