

QUICK GUIDE FOR USE OF SCOREBOARD CONTROLLER

Raise Antenna. Switch on back turns controller on – Within 30 sec scoreboard comes on.

Note: Reference to display below is on the controller.

Set Time of Day – Hold **SHIFT** Key and press **TOD** Key. Enter hh mm (Hour Minute). TOD Information displayed. Press **ENTER** Key.

Note: Insure **START** Switch is in the up position

Set Timer – Press **SET TIMER** Key. Enter 0 65 (Hours Minutes) Press **ENTER** Key. Information displayed.
To set timer direction – Hold **SHIFT** Key and press **CLK UP DN** Key. Toggle to position desired as shown on display. Press **ENTER** Key.

To start timer – Toggle **START** Switch to the up position

To stop timer – Toggle **START** Switch to the down position

Note: Once game starts, leave the **START** Switch in the up position

Change Inning – Press **INNING** Key and then press **<number>** of inning. Inning displayed. Press **ENTER** Key.

Change to Home Team – Press **HOME SCORE BY INN** Key

Increase Score for Home Team - Press **+1, +2, +3** Key

Note: First selection of **+1** Key displays "0" on the scoreboard

Decrease Score for Home Team - Press **-1** Key

Change to Visitor Team – Press **VISITOR SCORE BY INN** Key

Increase Score for Visitor Team - Press **+1, +2, +3** Key

Note: First selection of **+1** Key displays "0" on the scoreboard

Decrease Score for Home Team - Press **-1** Key

Reset Board for New Game – Hold **SHIFT** Key and press **NEW GAME** Key

Change Ball Count – Press **BALL** Key

Change Strike Count – Press **STRIKE** Key

Note: Once 3rd strike is reached, strike count returns to "0" & Out count increases by "1"

Change Out Count – Press **OUT** Key for each out

Clear all Ball/Strike Count – Press **CLEAR BALL STRIKE AT BAT** Key

Change Brightness of Scoreboard - Press **BRI DIM** Key

Note: Cycles through 3 settings of brightness